

SEER800BEAM	22CH Mode1	19CH Mode2	DMX Value	Funciton
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2		0---255	
Strobe	3	2	0---3	Closed
			4---103	Slow Strobe--->Fast Strobe
			104---107	Open
			108---207	Slow Pulsation--->Fast Pulsation
			208---212	Open
			213---225	Random Slow Strobe
			226---238	Random Medium Strobe
			239---251	Random Fast Strobe
			252---255	Open
Color	4	3	0---4	WHITE
			5---8	WHITE + COLOR1
			9---12	COLOR1
			13---17	COLOR1+ COLOR2
			18---21	COLOR2
			22---25	COLOR2 + COLOR3
			26---29	COLOR3
			30--- 34	COLOR3 + COLOR4
			35--- 38	COLOR4
			39---42	COLOR4 + COLOR5
			43---46	COLOR5
			47---51	COLOR5 + COLOR6
			52---55	COLOR6
			56---59	COLOR6 + COLOR7
			60---63	COLOR7
			64---68	COLOR7 + COLOR8
			69---72	COLOR8
			73---76	COLOR8 + COLOR9
			77---81	COLOR9
			82---85	COLOR9 + COLOR10
			86---89	COLOR10
			90---93	COLOR10 + COLOR11
			94---97	COLOR11
			98---100	COLOR11+ COLOR12
			101---104	COLOR12
			105---108	COLOR12 + COLOR13
			109---112	COLOR13
113---116	COLOR13 + COLOR14			
117---120	COLOR14			
121---124	COLOR14 + WHITE			
125---190	CW SlowRotation----->FastRotation			

			191---255	CCW FastRotation---->Slow Rotation
Fixed Gobo	5	4	0---3 4---7 8---11 12---15 16---19 20---23 24---27 28---31 32---35 36---39 40---43 44---47 48---51 52--- 55 56---59 60---63 64--71 72---113 114---117 118---159 160---166 167---172 173---179 180---185 186--- 191 192---198 199---204 205---211 212---217 218---223 224---230 231---236 237---243 244---249 250---255	WHITE GOBO 1 GOBO 2 GOBO 3 GOBO 4 GOBO 5 GOBO 6 GOBO 7 GOBO 8 GOBO 9 GOBO 10 GOBO 11 GOBO 12 GOBO 13 GOBO 14 GOBO 15 GOBO 16 CW FastRotation----->SlowRotation WHITE CCW SlowRotation----->FastRotation GOBO2 Shake Slow---->Fast GOBO3 Shake Slow---->Fast GOBO4 Shake Slow---->Fast GOBO5 Shake Slow---->Fast GOBO6 Shake Slow---->Fast GOBO7 Shake Slow---->Fast GOBO8 Shake Slow---->Fast GOBO9 Shake Slow---->Fast GOBO10 Shake Slow---->Fast GOBO11 Shake Slow---->Fast GOBO12 Shake Slow---->Fast GOBO13 Shake Slow---->Fast GOBO14 Shake Slow---->Fast GOBO15 Shake Slow---->Fast GOBO16 Shake Slow---->Fast
Gobo1 Select	6	5	0---5 6---10 11---16 17--- 22 23---28 29---34 35---40 41---52	WHITE GOBO1 GOBO2 GOBO3 GOBO4 GOBO5 GOBO6 GOBO7

			53---70 71---88 89---106 107---124 125---142 143---160 161---178 179---217 218---255	GOBO1 Shake Slow---->Fast GOBO2 Shake Slow---->Fast GOBO3 Shake Slow---->Fast GOBO4 Shake Slow---->Fast GOBO5 Shake Slow---->Fast GOBO6 Shake Slow---->Fast GOBO7 Shake Slow---->Fast CW SlowRotation----->FastRotation CCW FastRotation-----> SlowRotation
GOBO1 index Rotation	7	6	0---127 128---191 192---255	Position 0° ---->360° (FINE in CH8) CW SlowRotation-----> FastRotation CCW FastRotation----->SlowRotation
GOBO1 indexRotation FINE	8		0---255	GOBO1 index Rotation FINE
PRISM1	9	7	0---127 128--191 192--255	EXCLUDED PRISM1 PRISM2
PRISM1 Rotation	10	8	0---127 128---190 191---194 195---255	Position 0° ---->360° CW FastRotation-----> SlowRotation STOP CCW Slow Rotation----->Fast Rotation
PRISM2	11	9	0---127 128--255	EXCLUDED INSERTED
PRISM2 Rotation	12	10	0---127 128---190 191---194 195---255	Position 0° ---->360° CW FastRotation-----> SlowRotation STOP CCW Slow Rotation----->Fast Rotation
FORST	13	11	0---127 128---255	EXCLUDED INSERTED
FOCUS	14	12	0---255	
FOCUS FINE	15		0---255	
PAN(X)	16	13	0---255	
PAN(X) FINE	17	14	0---255	
TILTE(Y)	18	15	0---255	
TILTE(Y) FINE	19	16	0---255	
P/T SPEED	20	17	0---128 129---170 171---211 212---255	Fastest----->Slowest Slow Speed (1/3 MaxSpeed) Medium Speed (1/2 MaxSpeed) Fast Speed (Fastest Speed)
Lamp Control	21	18	0---32 33---64 65---96 97---128 129---160	Undefined LAMP OFF(>4s) Undefined LAMP ON(>4s) Undefined

			161---193 194---225 226---255	HALF POWER Undefined FULL POWER
Control	22	19	0---127 128---255	Undefined Reset ALL(>4s)

***NOTE:**关闭灯泡后，请勿立即又打开灯泡，请等待大于 2 分钟之后再点灯泡。如果无法点亮灯泡，试试给灯泡一次“关灯泡”信号，然后再去点灯泡。