

Eos-950A	21CH Mode1	16CH Mode2	DMX Value	Function
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2		0---255	
Strobe	3	2	0---7 8---63 64---71 72---127  128---133 134---189  190--195 196--250 251--255	Undefined Fast Strobe----->SlowStrobe Undefined Fast Puslation Slow Close--->Fast Puslation Fast Close Undefined Slow Puslation Fast Close--->Fast Puslation Fast Close Undefined Random Strobe Undefined
Red	4	3	0---255	Darkness----->Bright
Red FINE	5		0---255	
Green	6	4	0---255	Darkness----->Bright
Green FINE	7		0---255	
Blue	8	5	0---255	Darkness----->Bright
Blue FINE	9		0---255	
White	10	6	0---255	Darkness----->Bright
White FINE	11		0---255	
NULL	12	7	0---10 11---20 21---30 31---40 41---50 51---60 61---70 71---80 81---90 91---100 101---110 111--199 120---250 251---255	Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined
ZOOM	13	8	0---255	
NULL	14	9	NULL	NULL
Pan	15	10	0---255	
Pan FINE	16	11	0---255	
Tilte	17	12	0---255	

<b>Tilte FINE</b>	<b>18</b>	<b>13</b>	<b>0---255</b>	
<b>NULL</b>	<b>19</b>	<b>14</b>	<b>NULL</b>	
<b>P/T Speed</b>	<b>20</b>	<b>15</b>	<b>0---128</b> <b>129---170</b> <b>172---211</b> <b>212---255</b>	<b>Fastest Speed-----&gt;Slowest Speed</b> <b>Slow Speed(1/ 3 maxspeed)</b> <b>Medium Speed(2/ 3 maxspeed)</b> <b>Fast Speed</b>
<b>Control</b>	<b>21</b>	<b>16</b>	<b>0---130</b> <b>131---155</b> <b>128---255</b>	<b>Undefined</b> <b>Undefined</b> <b>Reset ALL</b>