

Eos-1000A	20CH Mode1	15CH Mode2	DMX Value	Function
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2	2	0---255	
Strobe	3	3	0---7	Undefined
			8---63	Fast Strobe----->SlowStrobe
			64---71	Undefined
			72---127	Fast Puslation Slow Close--->Fast Puslation Fast Close
				Undefined
			128---133	Slow Puslation Fast Close--->Fast Puslation Fast Close
			134---189	Undefined
			190--195	Random Strobe
			196--250	Undefined
			251--255	Undefined
Red	4	4	0---255	Darkness----->Bright
Red FINE	5		0---255	
Green	6	5	0---255	Darkness----->Bright
Green FINE	7		0---255	
Blue	8	6	0---255	Darkness----->Bright
Blue FINE	9		0---255	
White	10	7	0---255	Darkness----->Bright
White FINE	11		0---255	
Color	12		0---10	Undefined
			11---20	Color1
			21---30	Color2
			31---40	Color3
			41---50	Color4
			51---60	Color5
			61---70	Color6
			71---80	Color7
			81---90	Color8
			91---100	Color9
101---110	Color10			
111--199	Undefined			
120---250	Color Loop(Color1<--->Color10)			
251---255	Undefined			
Focus	13	8	0---255	
Focus Rotation	14	9	0---127	0° ----->360°
			128---191	CW Rotation Fast---->Slow
			192---255	CCW Rotation Slow--->Fast
Pan	15	10	0---255	
Pan FINE	16	11	0---255	
Tilte	17	12	0---255	

Tilte FINE	18	13	0---255	
P/T Speed	19	14	0---128 129---170 172---211 212---255	Fastest Speed----->Slowest Speed Slow Speed(1/ 3 maxspeed) Medium Speed(2/ 3 maxspeed) Fast Speed
Control	20	15	0---130 131---155 128---255	Undefined Undefined Reset ALL